

This bushing is for use on a 6V transaxle when a 12V starter is to be used.

The old starter bushing is removed from the case.

The new bushing is pressed in the transaxle case, being careful of proper alignment.

Be sure to lubricate with a high pressure grease before installing starter.

99-4031/0504