
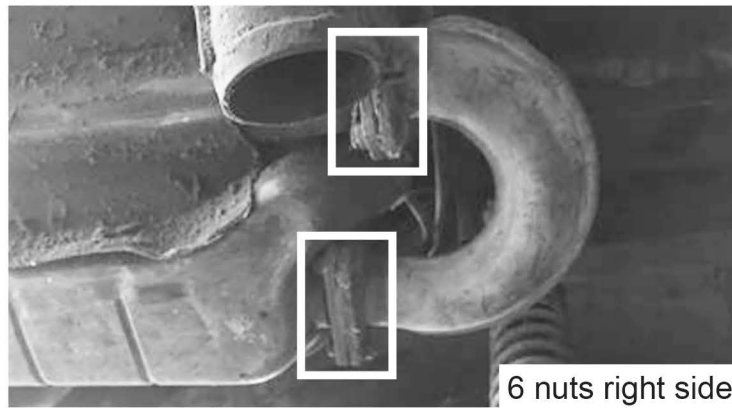


Installation of 00-3484-0

1. Remove existing exhaust. Do not remove heater boxes
2. Loosen all 12 nuts from heater boxers. Loosening the heater boxes, which will allow wider or narrower movement and insure proper fit with the header.

6 nuts left side

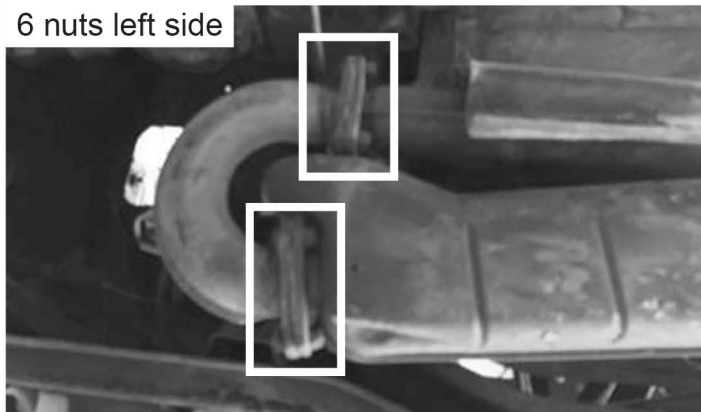

6 nuts right side

3. Bolt on new exhaust to heater boxes and tighten all loose nuts.

