

Quick Shift Instructions - 99-4010-0/0607

1. Remove floor mat and shaft to neutral
2. Remove attaching bolts from gearshift lever housing.
3. Remove gearshift lever, housing, boot and spring as one unit.
4. Remove reverse lock out plate.
5. Clean all components.
6. Remove shift knob, slide boot and housing from lever.
7. Place fulcrum ball, housing, boot and shift knob on lever.
8. Install reverse lock out plate with the ramp facing up and on the right side of car.
9. Place aluminum spacer over stop plate making certain that plate fits in the hollow flange of spacer and is firmly secured.
10. Lubricate all parts
11. Replace gear shift lever in former position and install longer bolts provided.
12. Check adjustments by shifting gears. If can engage reverse without depressing lever, loosen bolt and move housing to the left as far as possible, tighten bolt again.
13. Replace floor mat.