


VOLKSWAGEN BUS SPARE TIRE MOUNT

- ONE MODEL FITS ALL YEARS
- HEAVY PLATE MOUNTS TO FRONT PANEL
- INCLUDES TIRE COVER

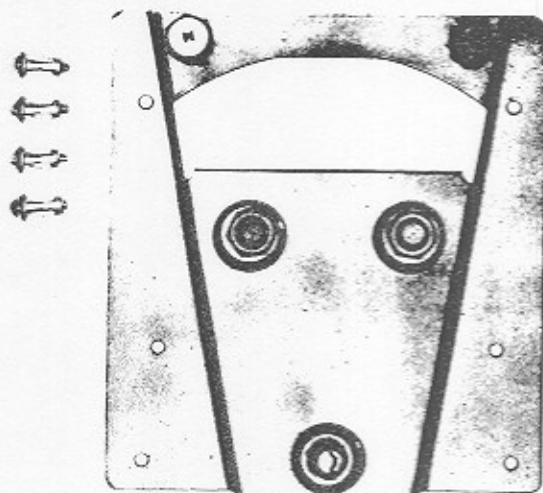

INSTRUCTIONS

1973-77 ALL MODELS

1. Remove VW emblem and any bushings from VW front panel.
2. Carefully align LOWER 2 holes of tire mount with VW emblem holes and drill 2 holes, $\frac{1}{4}$ " diameter into VW panel thru TOP tire mount holes.
3. Re-drill the 4 holes to $\frac{3}{8}$ " diameter.
4. Place 4 Molly fasteners into VW panel. Insert 4 Molly screws thru tire mount and securely tighten to VW panel.
5. Mount spare tire, inside out, secure with lock and nuts.
6. Large flat washers may be used in front of nuts.

1968-72 ALL MODELS

1. Remove VW emblem and any bushings from VW front panel.
2. Re-drill the 4 VW emblem holes to $\frac{3}{8}$ " diameter.
3. Proceed with 1973-77 Instructions, #4 - #6 above.

1967 & EARLIER, ALL MODELS

1. Remove VW emblem and any bushings.
2. Center tire mount on VW front panel. Drill 4, $\frac{1}{2}$ " dia. holes in VW front panel using tire mount as guide. (Do not use the 2 holes near center of panel)
3. Re-drill the 4 holes to $\frac{3}{8}$ " diameter.
4. Proceed with 1973-77 Instructions, #4 - #6 above.

